

★ ★ ★ ●
TRISTAR

EN | Instruction manual



BQ-2880UK

PARTS DESCRIPTION



SAFETY

- By ignoring the safety instructions the manufacturer can not be hold responsible for the damage.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Never move the appliance by pulling the cord and make sure the cord can not become entangled.
- The appliance must be placed on a stable, level surface.
- The user must not leave the device unattended while it is connected to the supply.
- This appliance is only to be used for household purposes and only for the purpose it is made for.
- This appliance shall not be used by children aged less than 8 years. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and

- understand the hazards involved. Children shall not play with the appliance. Keep the appliance and its cord out of reach of children aged less than 8 years. Cleaning and user maintenance shall not be made by children unless older than 8 and supervised.
- To protect yourself against an electric shock, do not immerse the cord, plug or appliance in the water or any other liquid.
 - Keep the appliance and its cord out of reach of children less than 8 years.
 - The temperature of accessible surfaces may be high when the appliance is operating.
 - The appliance is not intended to be operated by means of an external timer or a separate remote-control system.
 - **WARNING:** Charcoal or similar combustible fuels must not be used with this appliance.
 - To prevent fire or shock hazard do not expose this appliance to rain or moisture.
 - Covering the BBQ with aluminium foil or other material is dangerous! The heat cannot get away and will cause the BBQ to melt and malfunction.



- Surface are liable to get hot during use.

PARTS DESCRIPTION

1. Base
2. Oil drip pan
3. Support for the heating element
4. Heating element
5. Grill rack
6. Extra set of screws for securing the heating element

BEFORE THE FIRST USE

- Take the appliance and accessories out the box. Remove the stickers, protective foil or plastic from the device.
- Clean before use the appliance with a damp cloth.
- By using the appliance for the first time, the appliance may smell and emit some smoke. This is normal, the grease that may have adhered to the element during manufacture is burning off.

Assembly

- Fasten the plastic feet under the base.
- Insert the metal pipe support through the two holes in the oil drip pan and then through the two holes in the base.
- Place the rubber sockets on both ends of the metal support pipe.

- Fix the oil drip pan with the body by using the supplied long screw.
- Place the heating element on the metal support pipe and fix it with the supplied screws to the base.
- Place the grill rack on the base.

USE

- Make sure you place a heat resistance coating under the appliance in order to prevent traces due to heat and grease stains on your table.
- Fill the grease tray with water, make sure the water level remains below the element.
- During the use the water will evaporate and should be refilled.
Note: make sure you do not drip water on to the element.
- Warning! Use the appliance only with water in the grease tray. Without water in this tray the device will overheat!
- The water also reduce smoke and facilitate cleaning.
- Put the plug in an earthed power outlet.
- Allow the device to preheat for about 5 minutes
- After using the grill, disconnect the grill from the mains power supply

CLEANING AND MAINTENANCE

- Always unplug the device and let it cool down completely before cleaning
- Detach the grill rack including the heating element
- Remove and empty the fat collecting tray after each use and wash the tray in warm, soapy water.

- Never use abrasive cleaners, metal brushes or paint thinner to clean the base, otherwise the barbecue will be damaged.
- Never immerse the device under water, the device and the various parts are not dishwasher-proof.


ENVIRONMENT




■ This appliance should not be put into the domestic garbage at the end of its durability, but must be offered at a central point for the recycling of electric and electronic domestic appliances. This symbol on the appliance, instruction manual and packaging puts your attention to this important issue. The materials used in this appliance can be recycled. By recycling of used domestic appliances you contribute an important push to the protection of our environment. Ask your local authorities for information regarding the point of recollection.

Support

You can find all available information and spare parts at www.tristar.eu!

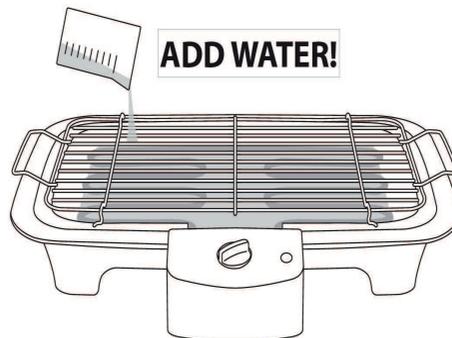

DO NOT COVER!

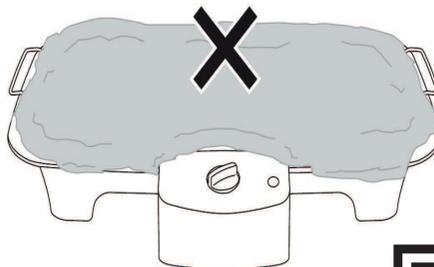

WWW.TRISTAR.EU

Tristar Europe B.V. | Jules Verneweg 87
5015 BH Tilburg | The Netherlands