



- EN | Instruction manual
- NL | Gebruiksaanwijzing
- FR | Mode d'emploi
- DE | Bedienungsanleitung
- ES | Manual de usuario
- PT | Manual de utilizador
- IT | Manuele utente
- SV | Bruksanvisning
- PL | Instrukcja obsługi
- CS | Návod na použití
- SK | Návod na použitie

TR-2573

PARTS DESCRIPTION / ONDERDELENBESCHRIJVING / DESCRIPTION DES PIÈCES / TEILEBESCHREIBUNG / DESCRIPCIÓN DE LAS PIEZAS / DESCRIÇÃO DOS COMPONENTES / DESCRIZIONE DELLE PARTI / BESKRIVNING AV DELAR / OPIS CZĘŚCI / POPIS SOUČÁSTÍ / POPIS SOUČASTI



WWW.TRISTAR.EU

Tristar Europe B.V. | Swardvenstraat 65  
5048 AV Tilburg | The Netherlands

## EN Instruction manual

### SAFETY INSTRUCTIONS

Please take into consideration the following health and safety precautions. Read these instructions before using the trimmer.

- By ignoring the safety instructions the manufacturer cannot be held responsible for the damage.
- This appliance is only to be used for household purposes and only for the purpose it is made for.
- Connect the power supply adaptor to an AC mains supply of 100-240 V.
- After use and before cleaning, disconnect the power supply adaptor from the mains supply socket.
- Do not unplug the device by pulling on the cord.
- Never move the appliance by pulling the cord and make sure the cord cannot become entangled.
- Do not let the power cord hang over the edge of a table or desktop.
- Do not let the device nor the power cord touch any hot surfaces.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- The device is intended for cutting natural human hair. Do not use the device for cutting artificial or animal hair. Using the product for other intended purposes will nullify the guarantee.
- Do not touch the power supply adaptor with wet hands, especially when plugging and unplugging the device from the power supply.
- Only use the adaptor that is supplied with the trimmer.
- Only use easily accessible power supply sockets.
- Do not cover the adaptor. This can lead to a dangerous temperature increase.
- To protect yourself against an electric shock, do not immerse the cord, plug or appliance in the water or any other liquid.
- Do not place the device on a wet surface or cloth during operation. Always make sure the device is dry when using.
- Do not use the device while bathing or showering.
- Do not place or store the device where it can fall into water.
- Do not use the device with a comb attachment that is damaged. This can lead to serious injury.
- Never try to remove any foreign bodies out of the device using another sharp object (i.e. a comb or scissors)
- Clean the device after every use.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- To protect children against the dangers of electrical appliances, please make sure that you never leave the appliance unattended. Therefore you have to select a storage place for the appliance where children are not able to grab it. Make sure that the cable is not hanging in a downward position.
- Only use the recommended comb attachments that are supplied with the device.
- The device can be used while plugged in or cordless when fully charged.
- When using the device, the hair must be clean, dry and combed well.
- Put a towel around your neck to avoid accidental injury.
- The device contains batteries and can only be replaced by professionals.

**WARNING:** Do not use the device near water, over the bath, pool or other water basin.

**WARNING:** Observe the above mentioned rules in order to avoid burning, electric shock or fire hazard.

### PARTS DESCRIPTION

1. Blades
2. Comb attachment
3. Length settings
4. Zoom wheel
5. On/Off button

6. Battery charge indicator
7. Charging cable
8. Comb attachment
9. Comb attachment
10. Blade oil
11. Brush

### BEFORE THE FIRST USE

- Take the appliance and accessories out of the box. Remove the stickers, protective foil or plastic from the device.
- The adaptor is not provided with the set. Please use an adaptor that is 5V 1000mA.
- Insert the power cord into the device and in the adaptor. Then insert the adaptor in the mains supply outlet (100-240V). Make sure the On/Off switch is Off.
- The light will be flashing red and will turn blue when it is fully charged.
- Charge the device at least 2 hours before using it for the first time wireless and after a long period of disuse. When the device is fully charged, you can use it wirelessly up to 90 minutes.

### USE

- Comb the beard or moustache before you start trimming.
- If you trim without the comb, your hair is cut off close to the skin.

### Inserting and replacing the comb attachments

- The device is supplied with two comb attachments that allows you to trim hair to different lengths as it keeps the trimming head at a certain distance to your skin. This distance determines the hair length and can be adjusted by turning the zoom wheel.
- Select the attachment according to the length of cutting:
  - The comb attachment (8) can cut hair for 20 cutting lengths from 1-10mm, 0.5mm per set.
  - The comb attachment (9) can cut hair for 20 cutting lengths from 11-20mm, 0.5mm per set.

- Make sure that the two side protrusions are visibly locked in fastening inlets of the comb attachment
- Replace one attachment removing it and inserting another as described above.

- Turn right the cutting length adjustment knob, to increase the length of cutting or left to reduce it.

### Cutting hair and trimming a beard with the attachments

Make sure that the appliance is fully charged when you start to cut. Only use appliance on clean, dry hair. Do not use it on freshly wet washed hair.

### Preparation

- Comb the hair in the direction of growth.
- Slide the preferred comb attachment into the device like explained in previous chapter.
- When trimming for the first time, start at the maximum trimming length to familiarize yourself with the device
- Switch on the device

### Trimming

- Move the appliance through the hair slowly.
- To trim in the most effective way, move the device against the direction of hair growth. Be aware that all hair does not grow in the same direction, you will need to move the device in different directions during the process.
- Make sure that the flat part of the comb is always fully in contact with the scalp to obtain an even result.
- Make overlapping passes over the head to ensure that you cut all hair that needs to be cut.
- Use the same technique of moving the device against the direction of hair growth for beard trimming.
- To achieve a good result with curly, sparse or long hair, use a comb to guide the hair towards the appliance

### Cutting hair and trimming a beard without the attachments

- **WARNING: The blades are very sharp. High risk of injury!**
- You can cut the hair in uniform length of 0.5-1 mm without comb attachment.
- For clipping the hairline of bristle and whiskers, neck shaving:
  - Move the hair clipper slowly along hair.
  - Turn the device so, that the back part was directed upwards.
  - Place the edge of the cutting head without comb attachment on desired length of bristle hairline.
  - Move down the clipper in operation.

### CLEANING AND MAINTENANCE

- Clean the appliance after each use.
- Do not hold the adaptor with wet hands while plugging and unplugging from the mains supply outlet.
- Always switch off the device by switching the On/Off button to the "Off" position. Ensure the device is plugged out of the main supply outlet.
- Remove the comb attachment from the hair clipper:

- Press forward cutting head with your thumb, in order to release the cutting head from the frame.

- Remove the cutting head carefully. If necessary, rinse the plastic comb attachments under running water, and then dry them thoroughly.

- Remove the remains of hair from the cutting head with attached cleaning brush.
- Insert the protrusion of cutting head back into the locking hole in the frame of cutting head.

- Press gently the cutting head in, until you hear a clicking sound of locking.

- **TIP:** In order to reduce friction, insert one or two drops of acid less oil between the blades and distribute evenly from time to time. Remove the exceeding oil with a cloth. During this process, be careful that the on/off button is not pushed.

- Clean the appliance after each use. Rinse the razor with warm water and use the supplied brush to thoroughly clean the various parts. Do not use detergents. Only keep the shaving heads under the water, not the total appliance. Never immerse the appliance in water or other liquid, the appliance and its various parts are not dishwasher safe. Let the shaving head dry.

- After each use of the trimmer remove the hairs with the supplied cleaning brush and a regular drop an acid free oil between the blades.

### ENVIRONMENT

- This appliance should not be put into the domestic garbage at the end of its durability, but must be offered at a central point for the recycling of electric and electronic domestic appliances. This symbol on the appliance, instruction manual and packaging puts your attention to this important issue. The materials used in this appliance can be recycled. By

recycling of used domestic appliances you contribute an important push to the protection of our environment. Ask your local authorities for information regarding the point of recollection.

### Support

You can find all available information and spare parts at [www.tristar.eu](http://www.tristar.eu)!