


ASSEMBLY

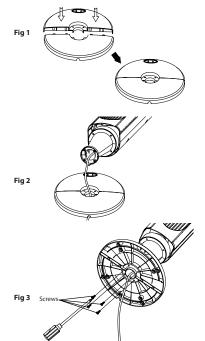

# **EN** | Instruction Manual

### SAFETY

This appliance shall not be used by children aged less than 8 years. This appliance can be used by children from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Keep the appliance and its cord out of reach of children aged less than 8 years. Cleaning and user maintenance shall not be made by children unless older than 8 and is supervised.

- By ignoring the safety instructions, the manufacturer cannot be held responsible for the damage.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Never move the appliance by pulling the cord and make sure the cord cannot become entangled.
- The appliance must be placed on a stable, level surface.

• The user must not leave the device unattended while it is connected to the supply.

- This appliance is only to be used for household purposes and only for the purpose it is made for.
- To protect yourself against an electric shock, do not immerse the cord, plug or appliance in the water or any other liquid.

## CONTROLS

- 1. Speed adjustment knobs
- 2. Timer knob
- 3. Fan
- 4. Base

## ASSEMBLY

- Snap the two base halves together by sliding the posts of one base half into the slots of the second base half.
- Pull the power cord through the centre hole of the assembled base.
- Use screws provided to attach the assembled base to the pedestal.
  Secure the screws with a screwdriver.

Turn the fan right side up and place on a dry and level surface before operating.

# **TRISTAR** VE-5837UK EN|Instruction manual

#### **BEFORE THE FIRST USE**

- Take the appliance and accessories out of the box. Remove the stickers, protective foil or plastic from the device.
- Follow the assembly diagram to assemble the product.
- Before using your appliance for the first time, wipe off all removable parts with a damp cloth.
  Never use abrasive products.
- Unscrew the screws out of the bottom of the fan.
- Fasten both bottom plates to each other, make sure the power cable is put through the hole in the middle.
- Screw the bottom plate onto the bottom of the fan.
- Put the power cable into the socket. (Note: Make sure the voltage which is indicated on the device matches the local voltage before connected the device. Voltage 220V-240V 50/60Hz).

#### USE

- Set the speed adjustment knob to the desired position.
- The timer switch can be used to set the desired operation time.

#### **CLEANING AND MAINTENANCE**

- Clean the appliance with a damp cloth. Never use harsh and abrasive cleaners, scouring pads or steel wool which can damage the device.
- Never immerse the electrical device in water or any other liquid. The device is not dishwasher proof.

#### **GUARANTEE**

- This product is provided with a 24 months guarantee. Your guarantee is valid if the product is used in accordance to the instructions and for the purpose for which it was created. In addition, the original purchase (invoice, sales slip or receipt) needs to be retained and to be submitted on request with the date of purchase, the name of the retailer and the item number of the product. The guarantee does not cover damage caused by:
- Accident or unanticipated events (e.g. lightning, water, fire).
- Improper use or transport.
- Disregard of safety and maintenance instructions.
- Other improper treatment or modification.

#### **ENVIRONMENT**

# X

This appliance should not be put into the domestic garbage at the end of its durability but must be offered at a central point for the recycling of electric and electronic domestic appliances. This symbol on the appliance, instruction manual and packaging directs your attention to this important issue. The materials used in this appliance can be recycled. By recycling used domestic appliances, you contribute an important push to the protection of our environment. Ask your local authorities regarding the point of recollection.

#### SUPPORT

You can find all available information and spare parts at www.tristar.eu

Tristar Europe B.V. | Jules Verneweg 87 | 5015 BH Tilburg | The Netherlands