



# QUICK START GUIDE

EK-3076AH

**1**  VUL EERST DE VERWARMINGSPLAAT MET WATER, DIT KUNT U DOEN MET DE MEEGELEVERDE MAATBEKER.



FIRST FILL THE BASE WITH WATER, YOU CAN DO THIS BY USING THE SUPPLIED MEASURING CUP.

**2**  PLAATS DE HOUDER EN DE EIEREN DIE U WILT KOKEN.



PLACE THE HOLDER AND THE EGGS YOU WANT TO COOK.

**3**  PLAATS DE STEKKER IN HET STOPCONTACT EN ZET DE SCHAKELAAR OP "1".



INSERT THE PLUG INTO THE SOCKET AND TURN THE SWITCH TO "1".

**4**  GEBRUIK DE NAALD AAN DE ONDERKANT VAN DE MAATBEKER OM EEN KLEIN GAATJE TE PRIKKEN IN DE ONDERKANT VAN DE EIEREN VOORDAT U ZE GAAT KOKEN. DIT ZORGT ERVOOR DAT DE EIEREN NIET GAAN BARSTEN.



USE THE SMALL NEEDLE WHICH IS ATTACHED AT THE BOTTOM OF THE MEASURING CUP TO PIERCE A SMALL HOLE IN THE BOTTOM OF THE EGGS BEFORE YOU START COOKING THEM. THIS WILL PREVENT THE EGGS FROM CRACKING.

**5**  KOOK DE EIEREN ...

5-7 MINUTEN VOOR ZACHTGEKOOKTE EIEREN.  
8-10 MINUTEN VOOR MEDIUMGEKOOKTE EIEREN.  
CA. 12 MINUTEN VOOR HARDGEKOOKTE EIEREN.



BOIL THE EGGS ...

5-7 MINUTES FOR SOFT BOILED EGGS.  
8-10 MINUTES FOR MEDIUM BOILED EGGS.  
ABOUT 12 MINUTES FOR HARD BOILED EGGS.

**6**  WANNEER U DE ZOEMER HOORT DAN IS HET WATER GEHEEL VERDAMPT.



WHEN THE BUZZER SOUNDS THE WATER HAS BEEN COMPLETELY EVAPORATED.

