PRODUCT INFORMATION

Item number KR-2176

Item description Bagged Vacuum Cleaner


The unequivocal identification of the product (type of product, trademark, 1.1.A trade name, model and possibly serial number


43*27mm



1.1.B A dissasembly map or exploded view




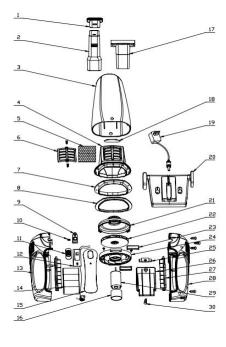

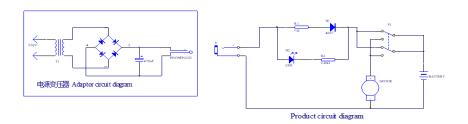


除SLX203C、SLX217C外的电路图

1.1. D Electronic boards diagrams

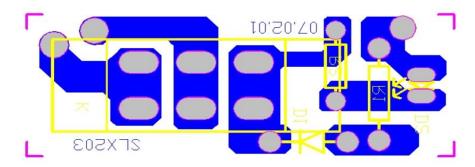

1.1. E List of necessary repair and test equipment

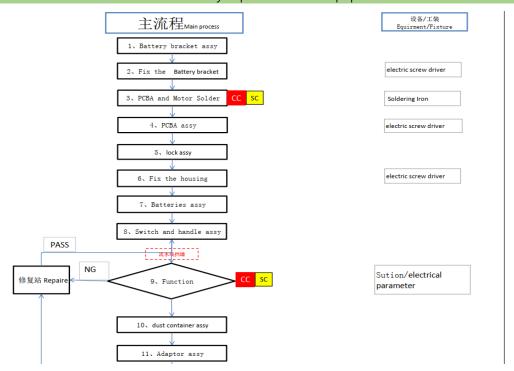

故障现象和故障排除列表 Symptom and troubleshooting list

Troubleshooting by yourself

To ensure that you do not encounter any problems, it is important to empty the dust container regularly and take this opportunity to check the filters and dean them if they are dirty. However, if you do encounter any problems with the appliance, use the following table to determine whether you can solve the problem yourself

Before trouble shooting. switch off the appliance and disconnect the power plug from the socket

Problem	Possible cause/solution
Appliance cannot be switched on	The rechargeable battery is completely empty: the LEDs on the handle are no longer illuminated. Switch off the appliance and charge the rechargeable battery
The appliance cannot be charged (LED does not light up)	The mains adapter or appliance is not corrective inserted: Check whether the appliance is properly in place in the wall mount. Check whether the mains adapter is seated correctly in the socket
The rechargeable battery is fully be charged but the appliance is hardly picking up any dirt	The dust container needs to be emptied or the filter needs to cleaned
Operating duration is becoming ever shorter.	The brush roller is soled and needs to be cleaned
The brush roller rotates slowly or irregularly	The brush roller is soiled and needs to be cleaned

1.1.0

User and maintencance instructions



