




KA-5011

OPIS DUELOVA / OPIS DELOVA / OPIS SESTAVNIH DELOV / PARTS DESCRIPTION

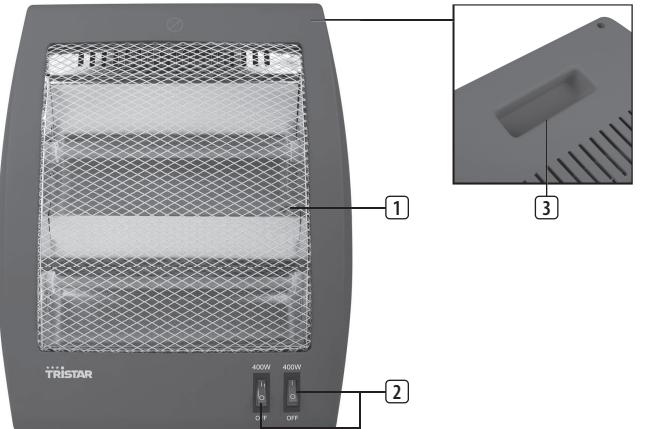

## PARTS DESCRIPTION

1. Heating elements
2. On/off switch
3. Handle

## BEFORE THE FIRST USE

- Place the device on a flat stable surface and ensure a minimum of 10 cm free space around the device. This device is not suitable for installation in a cabinet or for outside use.
- Put the two back legs separately supplied with the device, firmly in the recesses behind the appliance.
- Put the power cable into the socket. (Note: Make sure the voltage which is indicated on the device matches the local voltage before connecting the device. Voltage 220V-240V 50/60Hz)
- When the device is turned on for the first time, a slight odor will occur. This is normal, ensure adequate ventilation. This fragrance is only temporary and will disappear soon.

## EN Instruction manual

### Safety

- By ignoring the safety instructions the manufacturer can not be held responsible for the damage.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Never move the appliance by pulling the cord and make sure the cord can not become entangled.
- The appliance must be placed on a stable, level surface.
- The user must not leave the device unattended while it is connected to the supply.
- This appliance is only to be used for household purposes and only for the purpose it is made for.
- This appliance shall not be used by children from 0 year to 8 years. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Keep the appliance and its cord out of reach of children aged less than 8 years. Cleaning and user maintenance shall not be made by children unless older than 8 and supervised.
- To protect yourself against an electric shock, do not immerse the cord, plug or appliance in the water or any other liquid.

### WARNING:

In order to avoid overheating, do not cover the heater.

- CAUTION: Some parts of this product can become very hot and cause burns. Particular attention has to be given where children and vulnerable people are present.
- Children of less than 3 years should be kept away unless continuously supervised.
- Do not use the appliance with a programmer, timer, separate remote-control system or any other device that switches the heater on automatically, since a fire risk exists if the heater is covered or positioned incorrectly.
- Do not use this heater in the immediate surroundings of a bath, a shower or a swimming pool.
- Joists, beams and rafters shall not be cut or notched to install the appliance.
- Please do not install the appliance close to curtains and other combustible materials. This could cause a fire.
- The appliance shall, under no circumstances, be covered with insulating material or similar material.
- The fireguard does not give full protection for young children and for infirm persons.
- The fireguard of this heater is intended to prevent direct access to heating elements and must be in place when the heater is in use.
- The heater must not be located immediately below a socket-outlet.
- The heater needs to be installed so that the switches and other controls cannot be touched by a person in the bath or shower.
- WARNING: The heater must not be used if the glass panels are damaged.
- WARNING: This heater is not equipped with a device to control the room temperature. Do not use this heater in small rooms when they are occupied by persons not capable of leaving the room on their own, unless constant supervision is provided.

## PARTS DESCRIPTION

1. Heating elements
2. On/off switch
3. Handle

## BEFORE THE FIRST USE

- Place the device on a flat stable surface and ensure a minimum of 10 cm free space around the device. This device is not suitable for installation in a cabinet or for outside use.
- Put the two back legs separately supplied with the device, firmly in the recesses behind the appliance.
- Put the power cable into the socket. (Note: Make sure the voltage which is indicated on the device matches the local voltage before connecting the device. Voltage 220V-240V 50/60Hz)
- When the device is turned on for the first time, a slight odor will occur. This is normal, ensure adequate ventilation. This fragrance is only temporary and will disappear soon.

### USE

- Plug into a grounded outlet and switch the device on by the on / off switches.
- The right on / off switch is for the upper element. The left on / off switch for the lower heating element. If one heater element is turned on, the unit has 400 watts of heating power, when both heaters are turned on, the unit has 800 watts of heating power.
- Do not put anything on the heater, such as clothing or towels. Do not use the heater in the bathroom or other wet areas. The grates of the heater can be very hot.
- The exterior of the unit is hot. Avoid any physical contact, it can cause serious injury. Let it cool down completely before it is moved. Always use the handle or the top of the unit to move it.

### CLEANING AND MAINTENANCE

- The appliance needs only an external regular cleaning.
- Before cleaning, unplug the appliance and wait for the appliance to cool down.
- Clean the grilles from dust.
- Clean the appliance with a damp cloth. Never use harsh and abrasive cleaners, scouring pad or steel wool, which damages the device.

### GUARANTEE

- This product is guaranteed for 12 months granted. Your warranty is valid if the product is used in accordance to the instructions and for the purpose for which it was created. In addition, the original purchase (invoice, sales slip or receipt) is to be submitted with the date of purchase, the name of the retailer and the item number of the product.

### ENVIRONMENT

- This appliance should not be put into the domestic garbage at the end of its durability, but must be offered at a central point for the recycling of electric and electronic domestic appliances. This symbol on the appliance, instruction manual and packaging puts your attention to this important issue. The materials used in this appliance can be recycled. By recycling of used domestic appliances you contribute an important push to the protection of our environment. Ask your local authorities for information regarding the point of collection.

## SR Uputstvo za korišćenje

### BEZBEDNOST

- Ako bezbednosna upustva budu ignorisana, proizvođač se ne može smatrati odgovornim za štetu.
- Ako se kabl za napajanje ošteti, njegovu zamenu treba da obavi proizvođač, njegov servisni agent ili osoba sa sličnim kvalifikacijama kako bi se izbegla opasnost od povredjivanja.
- Nikada ne pomerajte uređaj povlačenjem kabla i vodite računa da se kabl ne umrsi.
- Uređaj mora biti postavljen na stabilnu i ravnu površinu.
- Nikada ne ostavljajte uređaj bez nadzora.
- Ovaj uređaj je samo za kućnu upotrebu i napravljen je samo u tu svrhu.
- Uređaj ne smije da koriste deca od 0 do 8 godina. Ovaj uređaj mogu koristiti deca uzrasta od 8 godina i starija uz stalan nadzor. Ovaj uređaj mogu koristiti osobe sa smanjenim fizičkim, senzornim ili mentalnim sposobnostima ili nedostatkom iskustva i znanja ukoliko su pod nadzorom ili obučeni za bezbedno korišćenje uređaja i shvataju podrazumevani rizik. Dece se ne smiju igrati uređajem. Čuvajte uređaj i njegov kabl daleko od domaćih dece mlađe od 8 godina Korisničko čišćenje i održavanje je odozgo.
- Da biste se zaštitali od strujnog udara, ne potapajte kabl, utikač ili uređaj u vodu niti bilo koju drugu tečnost.

### WARNING:

UPOZORENJE: Da ne bi došlo do pregravanja nemojte prekrivati grejalicu.

- OPREZ: Neki delovi ovog proizvoda mogu postati veoma vrući i izazvati opekotine. Posebno se mora obratiti pažnja u prisustvu dece ili ranjivih ljudi.
- Ukoliko nisu pod stalnim nadzorom, deca mlađe od 3 godine treba držati podalje od uređaja.
- Nemojte koristiti uređaj sa programerom, tajmerom, sistemom daljinskog upravljanja ili bilo kog uređaja koji uključuje kalorifer automatski, budući da postoji rizik od požara, ako je kalorifer prekriven ili nepravilno postavljen.
- Ne koristite grejač u neposrednoj blizini kade, tuša ili bažena.
- Tavanske grede i rogovi se ne smeju seći ili usecati zbog ugradnje aparata.
- Nemojte postaviti aparat blizu zavesa i drugog zapaljivog materijala. Ovo može izazvati požar.

- Aparat se ne sme pod bilo kakvim uslovima, prekrivati izolacionim ili sličnim materijalom.
- Zaštitna rešetka ne pruža potpunu zaštitu za malu decu i onemocale osobe.
- Zaštitna rešetka ovog kalorifera je namenjena sprečavanju direktnog pristupa grijenim elementima i mora biti postavljena kada je kalorifer u upotrebi.
- Kalorifer ne sme da se nalazi neposredno ispod zidne utičnice.

- Kalorifer mora biti tako postavljen da osoba u kadi ili pod tušem ne može dodirnuti prekidače i druge regulatore.

### UPOZORENJE:

Kalorifer se ne sme koristiti ako su staklene ploče oštećene.

### UPOZORENJE:

Ovaj kalorifer nije opremljen uređajem za kontrolu sobne temperature.

- Nemojte koristiti ovaj kalorifer u malim prostorijama kada su u njima osobe koje nisu u stanju da same napuste prostoriju, osim ako ne postoji stalni nadzor.

### OPIS DELOVA

1. Grijeni elementi
2. Prekidač za uključivanje i isključivanje
3. Ručica

### PRE PRVOG KORIŠĆENJA

- Postavite uređaj na ravnu i stabilnu površinu i obezbedite najmanje 10 cm slobodnog prostora oko uređaja. Ovaj uređaj nije namenjen za instalaciju u plakarici ili za upotrebu na otvorenom.
- Stavite dve zadnjice noge koje ste dobili sa uređajem i čvrsto ih pritegnite u užubljenju na zadnjem delu uređaja.
- Postavite kabl za napajanje u utičnicu. (Napomena: Pre nego što priključite uređaj, provjerite da li napon načinjen na uređaju odgovara lokalnom naponu. Napon 220 V-240 V 50/60 Hz)
- Kada se uređaj uključi po prvi put, pojavlje se blagi miris. Ovo je normalno, obezbeđuje odgovarajuće provetranje. Ovaj miris je samo privremen i uskoro će nestati.

### KORIŠĆENJE

- Uključite u utičnicu sa uzemljom i pokrenite uređaj putem prekidača za uključivanje i isključivanje.
- Gornji element za uključivanje i isključivanje je za grijeni element. Levi prekidač za uključivanje i isključivanje je za donji grijeni element. Ako je uključen jedan grejač, uređaj troši 400 vat snage, kada su uključena oba grejača, uređaj troši 800 vat snage.
- Ništa nemojte stavljati na grejalicu, naročito očedlju ili pšeskreke. Ne koristite grejalicu u kupatilu ili drugoj vlažnoj obasti. Rešetka grejalice može biti veoma topla.
- Spoljašnjost uređaja je vruća. Izbegavajte fizički kontakt jer može dovesti do ozbiljnog ozleda. Pustite da se potpuno ohladi pre nego što ga pomerite. Kada želite da pomereš uređaj, uvek koristite ručicu na gornjem delu.

### ČIŠĆENJE I ODRŽAVANJE

- Uređaju je potrebno samo redovno spoljno čišćenje.
- Pre čišćenja, iskopčajte uređaj iz struje i sačekajte da se ohladi.
- Očistite rešetke od prasmine.
- Očistite uređaj vlažnom tkaninom. Nikada ne koristite grubu i abrazivnu sredstva za čišćenje, sudeći ili čeličnu vunu, koji ošteteju uređaj.

### GARANCIJA

- Ovaj proizvod je obezbeđena garancija od 12 meseaca. Vaša garancija je važeća ukoliko je proizvod korišćen u skladu sa uputstvima i u svrhu za koju je napravljen. Dodatno, dokaz o kupovini (faktura, fiskalni račun ili priznajana) mora se priložiti sa datumom kupovine, nazivom prodavca i serijskim brojem proizvoda.

### OKRUŽENJE

- Ovaj uređaj ne bi trebalo odlagati u kantu za dubre nakon prestanka rada, već se mora odložiti na centralnom mestu za recikliranje električnih i elektronskih kućnih aparata. Ovaj simbol na uređaju upoznava da se upotrebu i pakovanju skreće van pažnju na važnost ovoga. Materijali upotrijebljeni u ovom uređaju se mogu reciklirati. Reciklažom korišćenih kućnih aparata doprinosite zaštiti sredine. Raspisajte se kod lokalnih vlasti za informacije vezane za mesto sakupljanja otpada za reciklaturu.

## HR Priručnik s uputama

### SIGURNOST

- Proizvođač se ne smatra odgovornim za štetu nastalu zanemarivanjem sigurnosnih uputa.
- Ako je kabel za napajanje oštećen, mora ga zamjeniti proizvođač, njegov serviser ili osoba sličnih kvalifikacija kako biste izbjegli opasnost.
- Uređaj nikad ne premještajte povlačenjem za kabel i pripazite da se kabel ne zapetljivi.
- Uređaj se uvijek mora postaviti na ravnu i stabilnu površinu.
- Nikad ne koristite uređaj bez nadzora.

### WARNING:

UPOZORENJE: Da ne bi došlo do pregravanja nemojte prekrivati grejalicu.

- OPREZ: Neki delovi ovog proizvoda mogu postati veoma vrući i izazvati opekotine. Posebno se mora obratiti pažnja u prisustvu dece ili ranjivih ljudi.

- Uređaj ne smiju koristiti djeca od 0 do 8 godina. Uređaj mogu koristiti djeca starosti od 8 godina i više uz stalan nadzor. Ovaj uređaj mogu koristiti osobe sa smanjenim fizičkim, osjetilnim ili mentalnim sposobnostima ili nedostatkom iskustva i znanja uz nadzor ili upute za uporabu uređaja da na siguran način iako razumiju uključene opasnosti. Djeca se ne smiju igrati s uređajem. Uređaj i njegov kabel uvijek držite dalje od dohvata djece mlađe od 8 godina. Djeca ne smiju vršiti čišćenje i održavanje, osim uz nadzor iako su starija od 8 godina.

- Radi zaštite od električnog udara, nemojte uranjati kabel, utikač ili uređaj u vodu ili bilo koju drugu tekućinu.

### WARNING:

UPOZORENJE: Kako biste sprječili pregravanje, ne prekrivajte grejalicu.

- OPREZ: Neki dijelovi ovog proizvoda mogu postati vrlo vrući i uzrokovati opekotine. Potreban je osobit pozor kada se u blizini nalaze djeca i osjetljive osobe.
- Dječa mlađa od 3 godine moraju se držati dalje od uređaja osim ako su pod stalnim nadzorom.

- Aparat nikoli ne premikajte s pogrom za kabel i se prepričajte, da se kabel ne zaplete.
- Aparat vedno postavite na stabilno, trdno površino.
- Uporabnik naj aparat ne pusti brez nadzora, ko je priključen u omrežno napajanje.
- Ta aparat lahko uporabljate samo za gospodinjske namene in samo za namen, za kateregaj je narejen.
- Aparat ne smejo uporabljati otroci od 0 do 8 let. Ta aparat lahko uporabljajo otroci stari od 8 let in več, če so neprekjeno nadzorovani. To napravo lahko uporabljajo osebe s fizičnimi,

- Nemojte koristiti uređaj s programatorom, tajmerom, zasebnim sustavom na daljinsko upravljanje ili drugim uređajima koji automatski uključuju grejalicu, jer postoji opasnost od požara ako grejalica nije ispravno postavljena.
- Z ugradnju uređaja ne smiju se rezati ili urezavati okomite, vodoravne ili krovne grede.
- Nemojte postavljati uređaj blizu zavjesa ili drugih zapaljivih materijala. To može uzrokovati požar.
- Uredaj se ni pod kojim okolnostima ne smije pokrivati izolacijskim i sličnim materijalima.

### OPIS DELOVA

1. Grijeni elementi
2. Prekidač za uključivanje i isključivanje
3. Drška

### PRVE PRVE UPOTREBE

- Uredaj stavite na ravnu i stabilnu površinu te oko njega osigurajte najmanje 10 cm slobodnog prostora. Uređaj nije predviđen za ugradnju u ormari ili za upotrebu na otvorenom.

- Dvije zadnjice noge (zasebno isporučene s uređajem) čvrsto postavite u ležištu iz uređaja.

- Uključite kabel napajanja u utičnicu. (Napomena: Prije priključivanja provjerite odgovara li nominalni napon uređaja naponu koji isporučuje utičnica. Napon: 220V-240V 50/60Hz)

---

recikliranjem odsluženih gospodinjskih aparatov boste pomembno prispevali k varovanju našega okolja. Vprašajte lokalne oblasti za informacije glede zbirnih točk.

recikliranjem odsluženih gospodinjskih aparatov boste pomembno prispevali k varovanju našega okolja. Vprašajte lokalne oblasti za informacije glede zbirnih točk.