



Assembly Instructions- KI-0751

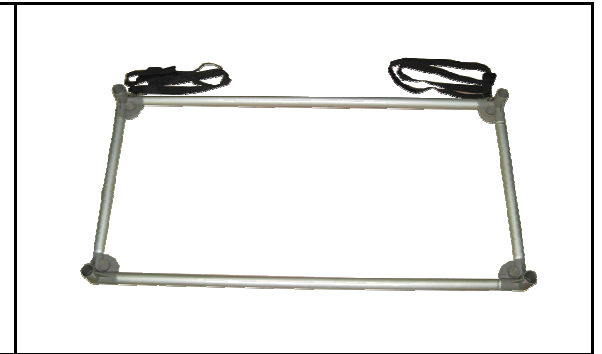

Accessories:

- A, Side tube(short) x 4
- B, Transverse tube (middle) x 4
- C, Pole C (long) x 4
- D, MDF shelves x 6
- E, Adjustable leg x 4
- F, 3-direct connector x 4
- G, Alu. Rod x 1
- H, MDF Top plate x 1

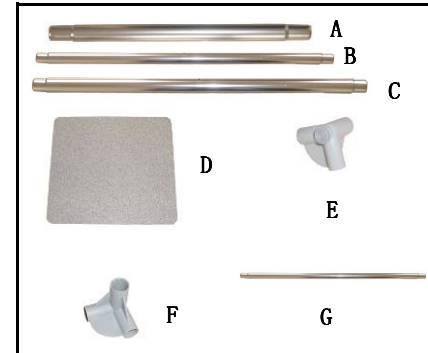

step 1: Take out all the parts from the carrybag



step 3: Insert the long tube (C) into the pole sleeves of the cover and erect the cover onto the framework base



step 5: Insert the alu. Rod (G), side tube (A) and transverse tube (B) into the top sleeves and connect together by (F)



step 7: put (D) in the layers and put (H) at the top, then the cupboard is ready for used

step 2: 1. Connect the Alu-tubes (A) and (B) with four adjustable legs (E) to form the framework base, put the two (E) with stripe at back side



step 4: put the 3-direct connector (F) at the top of the tube, put the two with metal ring at the back side



step 6: tie up the velcro stripe at the back side